

Rotary Switches for Eggle guitars

For those people looking for the Rotary switches for Eggle guitars, these are broken down into two types;

- The **3 way 4 Pole rotary switch** which is used for 2 humbuckers and engages various coil options such as the Eggle Berlin Pro & Deluxe using the Rotary Switch and the Toggle Switch (as found on Les Paul's)
- The Los Angeles - LA Eggle uses a **6 way 2 Pole Rotary Switch** for a selecting the pickups in the same configuration as the 5 way lever switch.


If you use the 3 way 4 pole for the LA **it will not work** as the layouts or the selected tags is different

| 4 pole 3 way switch | | | | | |
|---|----------|----------|---------|----------|---------|
| | position | terminal | contact | terminal | contact |
| Bridge | 5 | A | 1 | C | 7 |
| Bridge & Middle | 4 | A | 2 | C | 8 |
| Middle | 3 | A | 3 | C | 9 |
| Middle & Neck | 2 | A | 1 | C | 7 |
| Neck | 1 | A | 2 | C | 8 |
| This is the reason this switch will not work for a 5 way rotary on 3 PU's | | | | | |
| 2 pole 6 way switch | | | | | |
| | position | terminal | contact | terminal | contact |
| Bridge | 5 | A | 1 | C | 7 |
| Bridge & Middle | 4 | A | 2 | C | 8 |
| Middle | 3 | A | 3 | C | 9 |
| Middle & Neck | 2 | A | 4 | C | 10 |
| Neck | 1 | A | 5 | C | 11 |

NB: the rotary switch can be changed by removing the pointer-washer and turning the knob anti-clockwise and then fitting it to the desired rotation from 2 to 11 but you will only need 5 or 3 depending on what you are doing. The 2 pole and 4 pole are not interchangeable.

LA PLUS - CONNECTIONS TO: DPDT SWITCH 5 WAY ROTARY SWITCH AND PUSH/PULL SWITCH

This is a 2 Pole 6 Way switch and the D & B poles do not exist as the picture is for illustration purposes only.

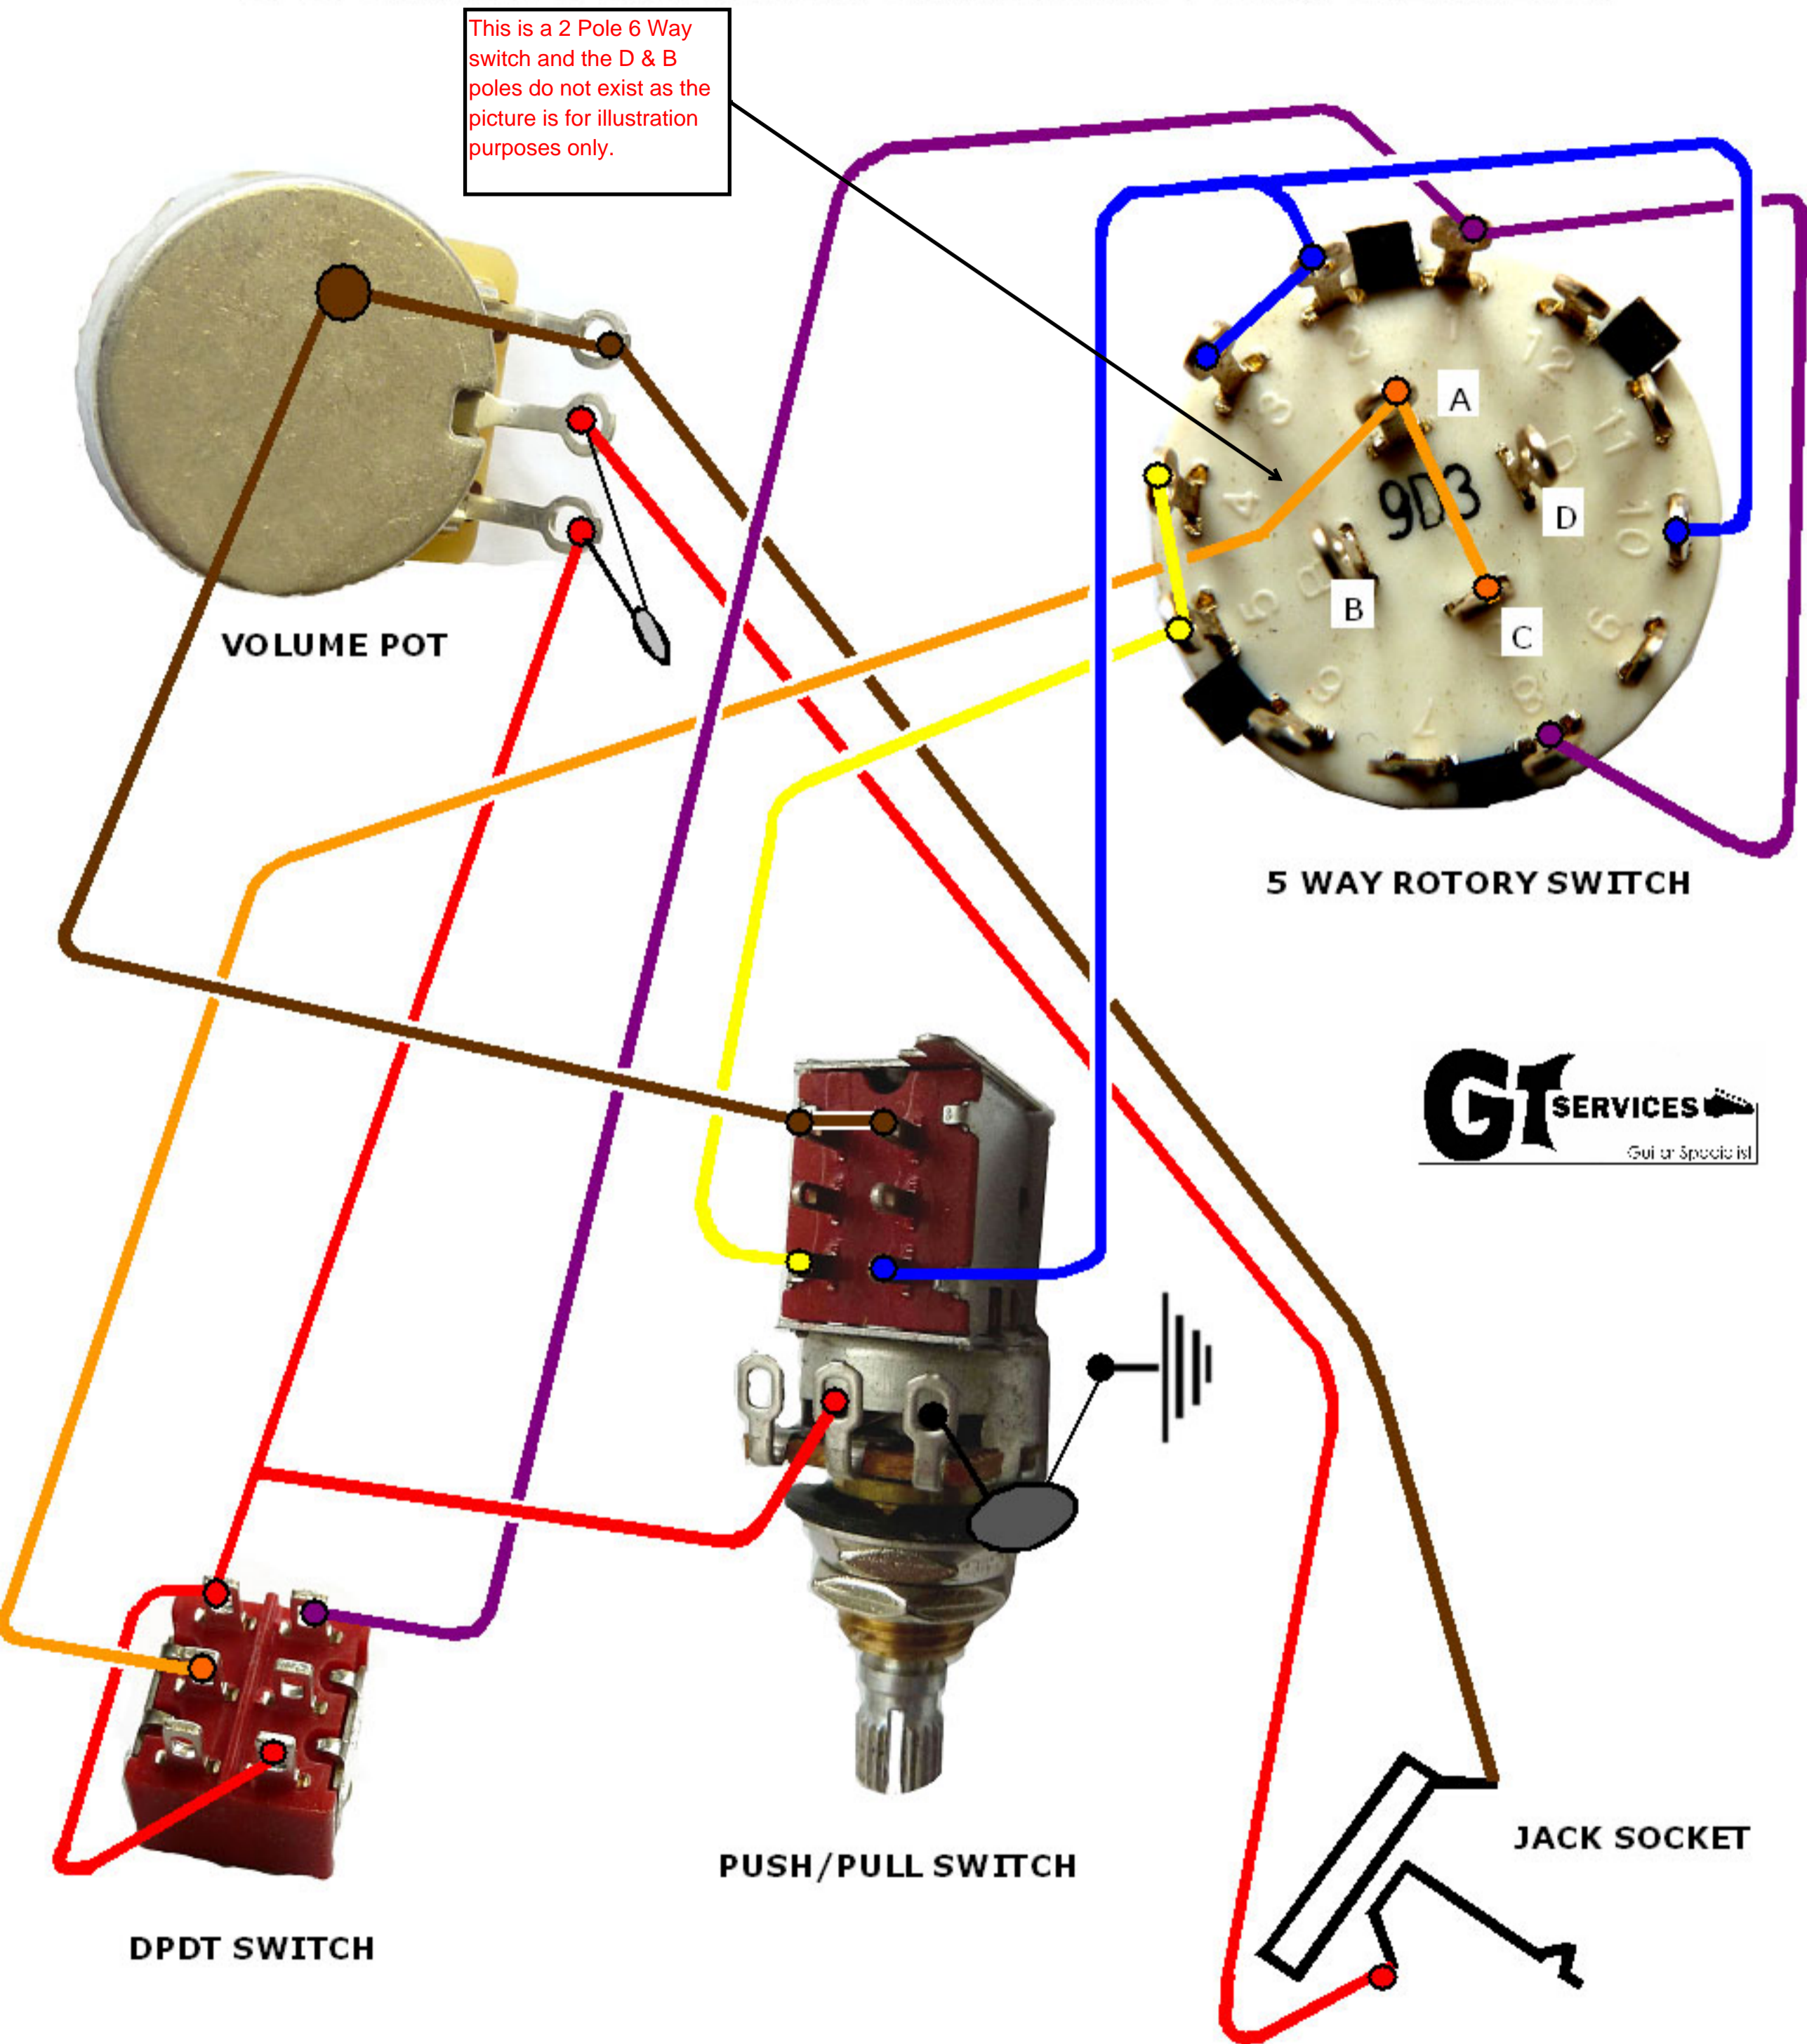

**NEXT PAGE SHOWS LA PLUS - CONNECTIONS FROM:
PICK UPS TO DPDT SWITCH AND PUSH/PULL SWITCH**

**LA PLUS - CONNECTIONS FROM:
PICK UPS TO DPDT SWITCH AND PUSH/PULL SWITCH**

